DOGHOUSE TENTS

PLATEAU 1.0

ALUMINUM HARDSHELL ROOFTOP TENT



OWNER'S MANUAL

INSTALLATION / SETUP / CARE

TABLE OF CONTENTS

1 Safety & usage guidelines 1
2 Specifications 1
3 What·s Included 2
4 Vehicle roof rack fit 3
5 Mount tent to crossbars 4
6 Opening & setting up the tent . 5


SAFETY & USAGE GUIDELINES

- Read and follow this manual before use.
- Use two or more people to lift, install or remove the tent.
- Check the mounts and close all travel latches before driving.
- Adjust speed for road and weather conditions.
- Avoid strong winds and severe weather.
- Keep away from open flames and heat sources.
- Never leave children unattended in the tent.
- Set up on firm, flat ground. Check ladder locks before climbing.

SPECIFICATIONS

Specification	Plateau 1.0
Closed dimensions (L × W × H)	83 × 51 × 4.7 in
Mattress type	Memory foam
Mattress (L × W × T)	78 × 48 × 1.5 in
Tent weight	117 lb (53 kg)
Sleeping capacity	2 people
Tent-top roof rack	Included
Tent static capacity	600 lb
Season rating	4 seasons
Warranty	1 year

SLEEPING AREA

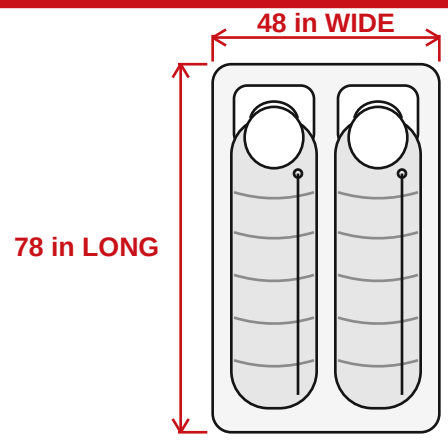

2 PEOPLE / MEMORY FOAM MATTRESS

KEY SPECIFICATIONS

Capacity	2 people
Tent weight	117 lb (53 kg)
Tent-top roof rack	Included
Tent fabric	PU 5,000 mm polyester Oxford, UV protection
Rainfly	PU 1,000 mm, SPF 30+ UV protection
Roof and base	Aluminum honeycomb
Ladder	7 ft 5 in telescopic ladder
Season rating	4 seasons, insulation liner included


VEHICLE & RACK REQUIREMENTS

- ✓ Use compatible roof crossbars rated for the tent, mounting hardware and loaded gear.
- ✓ Measure crossbar spacing centre to centre.
- ✓ Ideal crossbar spacing for the Plateau 1.0 is 46–54 in.
- ✓ Check that the crossbars are parallel and securely installed.

PLATEAU 1.0

Aluminum Hardshell Rooftop Tent

WHAT·S INCLUDED

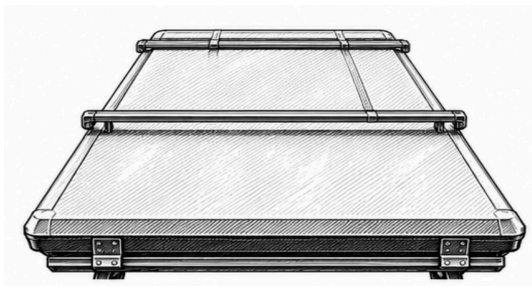

Rooftop Tent (1)
Plateau 1.0
(with mattress installed)



Telescoping Ladder (1)
Adjustable up to
7 ft 5 in (226 cm)


ALSO INCLUDED

Condensation mat
Interior storage bags (2)
USB-rechargeable LED dome light
USB charging station
Overhead storage net and side pocket

Included with the tent - ships separately
Tent-top roof rack, telescoping ladder, and insulation liner



Window Rods (2)
(for awning windows)

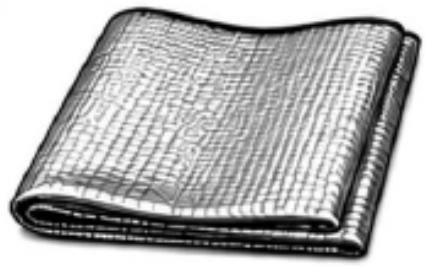

Insulation Liner (1)
(3–4 Season Use)



Shoe Bags (2)
(removable, interior mount)

MOUNTING HARDWARE
TENT TO VEHICLE CROSSBARS



Sliding Plates (8)
(for tent mounting rails)



Hex Bolts (8)
(M8)



Curved Mounting Brackets (4)
(with protective rubber coating)



Mounting Knobs (8)
(M8)



Rail End Caps (4)
(for tent mounting rails)

CROSSBAR HARDWARE
TENT-TOP ROOF RACK



Crossbar Brackets (4)



Hex Nuts (8)
(M8)




T-Slot Nuts (8)
(for accessory crossbars)



Short Bolts (8)
(M8)
(for brackets to tent rails)



Long Bolts (8)
(M8)
(for crossbars to brackets)

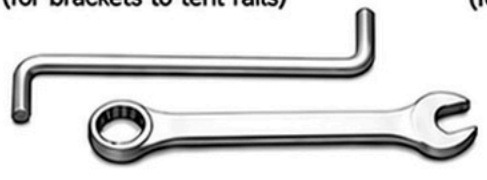

Tools (2)
(Allen Key &Wrench)



Rubber Strips (2)
(for crossbar channels)
(May arrive pre-installed or loose)

Vehicle Mounting Hardware and Accessory Crossbar Hardware Kits are included inside the tent box.

BEFORE YOU BEGIN

- ☑ Unpack and verify all parts are included.
- ☑ Inspect components for shipping damage.
- ☑ Contact Doghouse Tents if any parts are missing or require replacement.

DOGHOUSE TENTS

PLATEAU 1.0

ALUMINUM HARDSHELL ROOFTOP TENT

STEP 1

VEHICLE ROOF RACK REQUIREMENTS



ROOF RACK REQUIREMENTS

Dynamic load (driving)


Use a rack rated for the 117 lb tent, mounting hardware and loaded gear. Check the vehicle roof limit as well.

Static load (parked)

Allow for the tent, occupants and gear. The Plateau tent capacity is 600 lb.

Crossbar type

Use two compatible, vehicle-specific crossbars, factory or aftermarket.

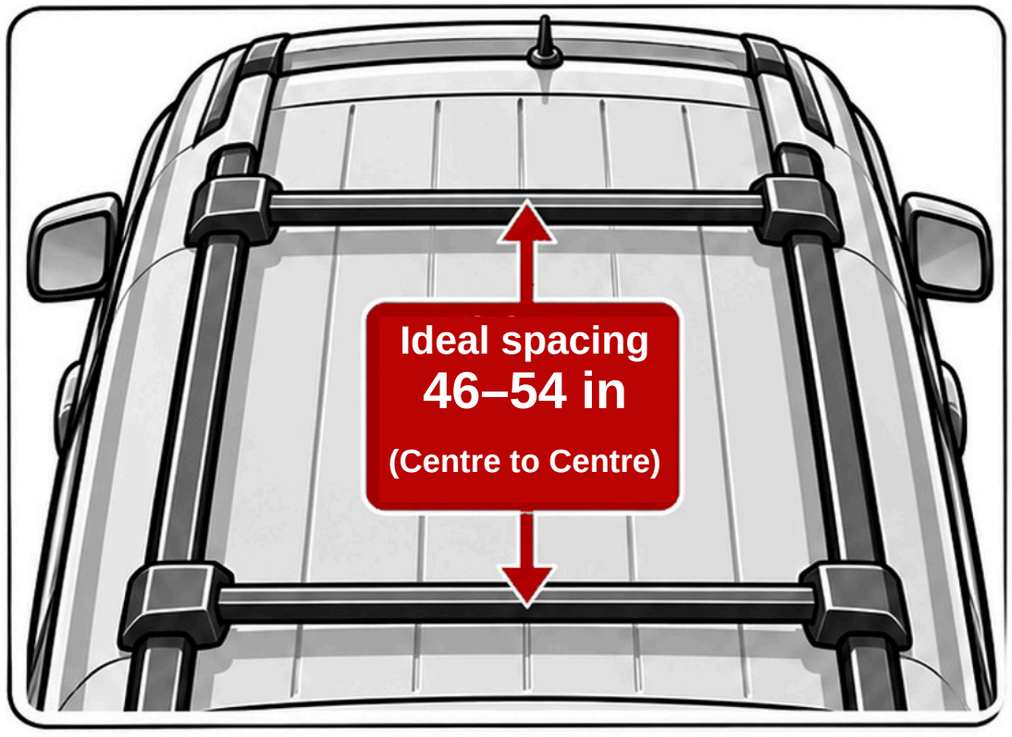

KEY NOTES

Crossbar spacing

Measure from centre to centre. Plateau ideal spacing is 46–54 in.

Check both crossbars

Keep them parallel, securely installed and in good condition.

Check the loaded rack

Use a rack rated for the tent and any additional gear. Check hatch clearance.

IMPORTANT

Confirm your vehicle's roof rack and load ratings with your vehicle manufacturer or rack supplier before installation.

DOGHOUSE TENTS®

PLATEAU 1.0

ALUMINUM HARDSHELL ROOFTOP TENT

STEP 2

MOUNT TENT TO VEHICLE CROSSBARS

MOUNTING HARDWARE (INCLUDED)



Curved Mounting Bracket (4)



Sliding Plate (8)




Hex Bolt (M8) (8)




Mounting Knob (M8) (8)

1 Take your eight sliding plates and eight bolts. Slide two sliding plates with bolts into each end of the tent mounting rails (four per rail).

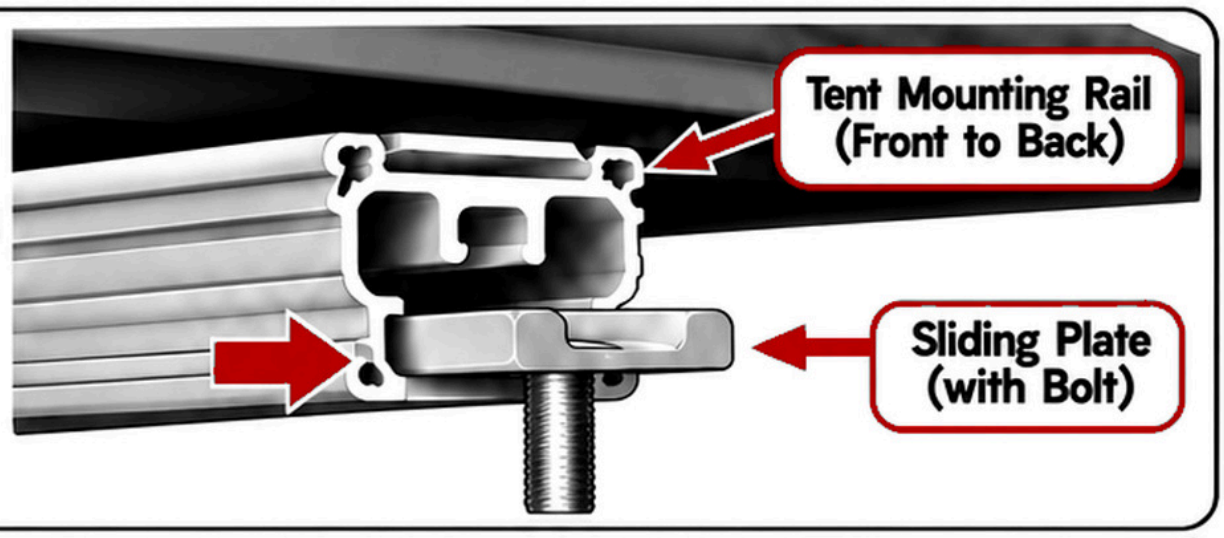

2 Make sure two sliding plates and two bolts (four total) are on the inside of your vehicle crossbars for each tent mounting rail.

Slide the other four sliding plates and bolts to the outside of the crossbar.

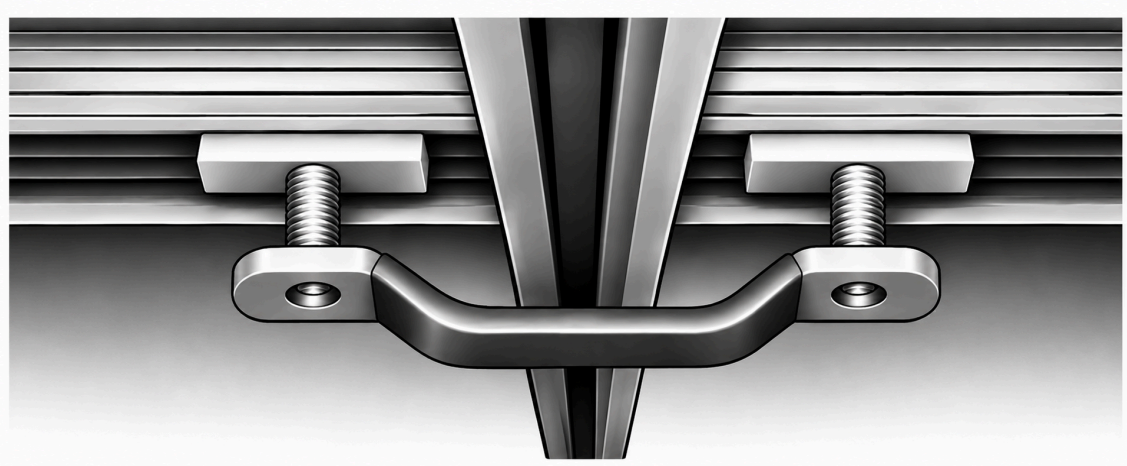

3 Tighten the bolts using the mounting knobs on all four locations (front and rear of both mounting rails).

Blue Loctite® is recommended when using the knobs.




IMPORTANT

- ☑ Use two mounting brackets per crossbar (four total).
- ☑ Ensure the tent is centered and properly positioned on the vehicle.
- ☑ Fully tighten all eight mounting knobs (use Blue Loctite®).

Park on firm, level ground and set the parking brake before opening the tent.

1 Release the rear latches

Unlatch the travel latches at the rear of the tent.

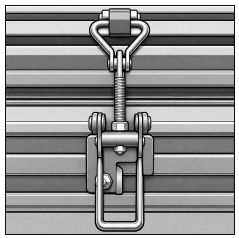

2 Flip the tent open

Lift the rear edge of the hardshell lid and guide it all the way open.
Pull the bungee cord down to free any fabric caught along the shell edge.



Lift the lid



Guide it open

3 Set up the ladder

Attach the ladder at both mounts. Extend it onto firm, level ground. Check the rung locks and stability before climbing.



4 Install the two window rods

From outside the tent, fit the two window rods to the rainfly. Check that both rods are seated and holding the fly open.

Fit the rainfly window rods at the ladder end of the Plateau.

Glacier reference illustrations




Base mounting slot



Rod inserted at base



Rod seated in eyelet

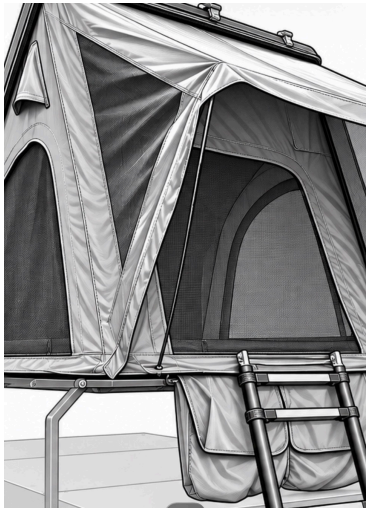

Rainfly window rod at the ladder end

5 Hang the two shoe bags

Slide both bags into the track and make sure they hang clear of the ladder.

Glacier reference illustrations



Bag placement beside the ladder



Shoe bag attachment detail